

Getting Started Guide



Gooshy Switch

Overview

- The Gooshy Switch is a soft, textured gel pad that when pressed activates music, vibration and lights from the switch as well as activating the switch effect on the PC.
- It can be used alone as a sensory tool or used with any program or other game or toy that is designed to use a switch such as the "switch it" games suite.
- The lights, music and vibration functions can be turned on and off independently using the buttons on



the
bottom of
the switch

Step by Step

1. The Gooshy switch is connected to the PC using a 'Joycable'.



2. This cable has 2 phono jacks so you can have the Gooshy switch as well as another device such as mouse or another switch attached at the same time
3. This then connects to the PC via a USB socket.
4. To activate the switch press down firmly on it.
5. To change the switch settings on individual games, remember to go into the "settings" or "options" menus of the games.
6. If you are experiencing problems with the switch working, check the connections and the batteries.

Where to find more information

- Watch the video here:
<http://www.youtube.com/watch?v=tJL7RgN9XuQ>