

Getting Started Guide



PS4

Overview

- PlayStation 4 is a home video game console developed by Sony Interactive Entertainment. It is the eighth console in the PS family.

Step by Step

- Turn on the PS4** – Press the power button under the SONY label



- Turn on the PS4 controller** – Press the PS button (button H on diagram)
- General controls** - Every game will have different controls but here are the general settings

- A - Directional buttons
- B – SHARE button
- C - Touch pad/Touch pad button the touchpad functions when the touchpad is pressed.
- D - Speaker
- E - OPTIONS button
- F – X button/ square button / triangle button / circle button
- G - Right stick/R3 button The R3 button functions when the stick is pressed.
- H - PS button
- I - Stereo headset jack
- J - Extension port
- K - Left stick/L3 button The L3 button functions when the stick is pressed.



- Navigating the Menus** – Use the directional buttons (A) to move and the X button (F) to select. To return to the main menu at any time press the PS button (H)
- Load the game** – insert the disc. To eject press the button next to the power button.
- Shutting down the system** – Press the PS button, go to the toolbar at the top of the menu screen and go across to the power button, select turn off PS4.

PS sign in – You have a hospice specific account which can be used to log in to the PS network with.

PS updates – on occasion the PS will need to run updates, to start an update running press X on the controller

BATTERIES REQUIRED – Controllers **DO NOT** require batteries. Connect them to the usb port on the console with the connector