

# Getting Started Guide



## Xbox One – Adaptive Controller

### Overview

- The Xbox Adaptive Controller is a video game controller designed by Microsoft for Windows PCs and the Xbox One video game console.
- The controller was designed for people with disabilities to help make user input for video games more accessible.

### Step by Step

#### Start Up

1. Decide which button(s) you wish to control and insert a relevant switch(es) into the 3.5mm jacks on the back of the controller or into the USB ports on the side. Alternatively you can use the large controls on the top of the controller.

2. Connect the usb cable from the PC to the adaptive controller (USB-C port). The adaptive controller will turn on



3. Once Xbox button is continuously lit the controller is ready to use.
4. There is a 3.5mm headphone port on the side of the controller should the user wish. This still allows audio externally for other players.

**Batteries required : None**

### Using Despicable Me:Minion Rush with adaptive controller



Plug joystick into Left joystick USB port

Plug wired 3.5mm switches into ports A and B or use the big buttons on the top

Press A to enter a level, B to go back/pause the game. Use the joystick to move side to side, jump and crouch/roll.