

Getting Started Guide


Canon Compact Photo Printer Selphy CP1300 - Wireless Printing



Overview

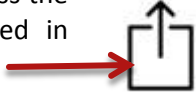

Instantly create superb quality, durable prints from compatible smart devices, cameras and more – wherever you go – with this portable Wi-Fi photo printer. Share precious memories in unique ways with a range of layout and 'shuffle' options.

Step by Step – Wireless connection to another device

1. Follow steps in the getting started guide for the Canon printer to get it set up and powered on.
2. On top of the printer and underneath the **MENU** button is a small button that looks like an aerial. Pressing this button brings up the **Wi-Fi Menu**. 
3. Use the arrow keys to move the box and highlight **Enable**. You then press the **OK** button.
4. Use the arrow keys to move the box and highlight **DIRECT CONNECTION**. Press the **OK** button.

5. You are then given the option on whether to use a password to connect your device. Use the arrow keys to highlight **NO** and press **OK**.
6. The printer will then create its own wireless network you can join, the screen on the printer should now display the name of the network:
SSID:CP1300 followed by some letters and numbers
7. Open the **Wi-Fi Menu** on the device you wish to connect to the printer.
8. In the list of available networks you should see the name of the printer network displayed. Press on this name to connect to the printer.
9. Once connected press the **HOME** button on the top of the printer to take you back to the main screen

Step by Step – Printing from an iPad

1. On your iPad open your photos/Gallery.
2. Press on the photo you wish to print.
3. You then need to press the **SHARE** button located in the top right corner 
4. Across the bottom of the screen you should have a list of options, scroll to the right until you see **PRINT** 
5. Pressing **PRINT** will bring up a printer option screen. It will display the name of the printer you are using and allow you to select the number of copies you wish to print and whether to print in colour or black and white.
6. Once you have adjusted these settings as required press the word **PRINT** in the top right corner of the box.