

Getting Started Guide

Canon Compact Photo Printer Selphy CP1300



Overview

Instantly create superb quality, durable prints from compatible smart devices, cameras and more – wherever you go – with this portable Wi-Fi photo printer. Share precious memories in unique ways with a range of layout and 'shuffle' options.

Step by step

1. Place the printer onto a flat surface.
2. Take the power cord and place the plug into a socket and the silver end into the hole on the back of the printer that is marked **DC IN**

On the front of the printer pull down the flap where its marked **OPEN**

3. Take the paper tray and lift the flap where it says **OPEN**. Folding it all the way open until it lies up at a slight angle.

4. Take the paper tray and slide it into the front of the opening until you hear a slight click.

Press and hold the **ON** button located on the top of the printer. Your printer should now power up. You may hear a whirring sound while it does so.

5. Tilt the screen up so you can see it better This is the home screen where you can select your picture type and adjust settings.

Step by step – Printing pictures from an SD card

6. Remove the SD memory card from your device. Place it into the slot on the front of the printer marked **SD**

7. The screen on the printer should then display your photos. You can cycle through these by using the left and right facing arrow buttons on the top of the printer.

8. When you arrive at the photo you want to print press the up facing arrow to add 1 copy to be printed. You can add to the number of copies by pressing the up arrow again. To decrease the amount of copies press the down arrow.

9. If you wish to make any adjustments to your photo, size, orientation or number of photos per page, you can press the menu button and do so.

10. Once you have selected and made any adjustments to the pictures, you then press the print button.

To print from your iPad see our “Getting started guide; Canon Compact Photo Printer Selphy CP1300- Wireless Printing”