

Getting Started Guide



Adaptive Controller converter for the PS4

Overview

- The Xbox Adaptive Controller is a video game controller designed by Microsoft for Windows PCs and the Xbox One video game console.
- The controller was designed for people with disabilities to help make user input for video games more accessible.
- Using the USB converter you can use the controller to play games with the PS4.

Step by Step - Wired Connection

1. Take the coloured USB stick and plug it into the usb port located on the front of the PS4



2. The lights on the side of the stick should light up
3. Plug the USB-C lead (used for charging) into the back of the adaptive controller.

5. Turn the adaptive controller on by pressing the XBOX button and then press the button again for the controller to connect to the PS4.
6. Decide which button(s) you wish to control and insert a relevant switch(es) into the 3.5mm jacks on the back of the controller or into the USB ports on the side. Alternatively you can use the large controls on the top of the controller.
7. You will need to plug in a joystick control in the left thumbstick USB input on the adaptive controller to have navigational control on the PS4 with the adaptive controller (the D-pad will not let you navigate the menus as it does on an Xbox)



8. When the adaptive controller is plugged in the controls are identical to a PS4 controller they are just labelled differently (Xbox Buttons are listed on the left)

X – Triangle

B - Circle

Y – Square

A - X

3 Lines – Options/pause

2 Squares – Middle Button