

Getting Started Guide



PODS play tent

Overview

PODS play tents are portable, inflatable, immersive sensory spaces that plug in, pop up and are ready to play in 40 seconds. The stunning play den makes the most creative and inspiring place to play.

To make story time even more magical, it comes with a complementing illustrated eBook, audio books and sound effects, creating another dimension to the world of experiential play.

Step by Step

Setting up

1. Take everything out of the PODS carry bag and set aside the power cable, floor mat and light controller.
2. Put the tent on the floor ensuring there is enough room for it to inflate.
3. Plug the power cable into the fan (it screws in) and into a power socket. Turn the fan on to it's maximum setting by turning the black dial to the right.
4. The tent should now inflate in around 40 seconds.

5. Zip in the floor mat – this will add comfort and make the unit more stable.
6. The power must be kept on to keep the tent inflated but the fan can be turned down to reduce the noise and power once it is fully inflated
7. Use the controller to change the brightness, the colours, the speed at which the colours change and access the many programs that change the colours in different ways and sequences.



Sound effects, audio book and e-book

There are digital files in the iBook and iMovie apps on your iPad that can be played to compliment the play tent. To get the best effect, you may want to pair a Bluetooth speaker and insert the speaker into the pocket of the tent located near the fan.

Packing away

1. Remove the Bluetooth speaker and anything from inside the tent including any children(!) or toys.
2. Unzip and remove the floor mat and ensure the door zip is undone.
3. Turn off the power and unplug the power lead from the fan.
4. The tent will take around 10 minute to deflate if left alone
5. Once deflated fold the tent inwards and put into the bag. You may want to give the bottom of the tent and floor mat a wipe or clean to prevent dirt building up and damaging the tent before putting it in the bag.
6. Finally put the floor mat, power cable and controller in the bag and zip shut.