

Tilt & Touch Table – Getting Started Guide



Overview

- The Genee Tilt & Touch Table is an interactive touchscreen system that enables users to engage with games and images simply by interacting/touching the screen
- You can adjust both the angle and height of the Tilt & Touch Table allowing a variety of user's access to it.

Step by Step

1. **Power on** – Make sure it is plugged into an electrical socket. Turn the socket on and the Tilt & Touch table will power up
2. You will see this home screen:



3. Each Folder has different content within it, you can explore each folder by pressing on it. There are 12 in Total to explore

Adjusting Volume

1. Click on the Cog in the top right Corner



2. You will be asked to enter a pin code on this screen



3. The Pin code you need to enter is **1111**
4. You will now be able to adjust the volume to your desired level

Shut Down

1. **Shut down the Tilt & Touch Table** – In the top right corner you will see the power Icon



2. When you press the power button you will be asked to enter a Pin Code as before
3. The Pin code you need to enter to power down the Tilt & Touch Table is **4444**.
4. The Tilt & Touch Table will now start its shutdown.
5. Once it has shut down and the screen has gone black you may remove the plug from the socket