

# Getting Started Guide




## Xbox One

### Overview

- Xbox One is a home video game console developed by Microsoft.
- Xbox One has a new co-pilot mode. This allows in-game controls to be duplicated across two controllers or even assigned different functions.
- Co-pilot was developed primarily to help gamers with disabilities play the game. For parents and carers, co-pilot means they can play single-player games with the children, helping them out on occasion without losing the flow of the game.


### Step by Step

1. **Turn on the Xbox** – the button can be found on the right hand side of the white box at the bottom of the unit or press the Xbox button on the controller.

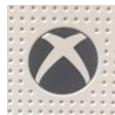

2. **Controller general settings** – Every game will have different controls but here are the general settings

- |                   |                           |
|-------------------|---------------------------|
| 1 Left stick      | 6 Menu button             |
| 2 Left bumper     | 7 Right bumper            |
| 3 View button     | 8 Directional pad (D-pad) |
| 4 USB charge port | 9 Expansion port          |
| 5 Xbox button     | 10 Right stick            |

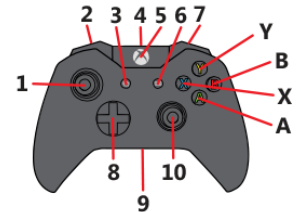

**Xbox button (5).** Multiple functions.

**Hold to turn on or off the console or controller.** When using the console, press this button once to go to the Home screen, no matter where you are. Press this button to turn off co-pilot.

**View button (3).** Use this button to focus in on an activity in a game or app, such as pulling up a map during a role-playing game or accessing the address bar in Internet Explorer.

**Menu button (6).** Use this button to access game and app menu options like Settings or Help, along with commands within the user interface like Enter on a keyboard.

**Button A.** Usually used to **select** or **continue**.

**Button B.** Usually used to **go back**.

3. **Load the game** – insert the disc. To eject press the white button on the side of the disc slot



4. If no disc – select the game from the menu to launch
5. **Turn off the system** – Press the Xbox button, go to the top menu and across to System, select turn off console

**Xbox updates** – on occasion the Xbox will need to run updates; it will prompt you to do so; to start an update running press A on the controller

**BATTERIES REQUIRED** – Controllers require 2 x AA batteries