



*These “Bite-sized” Training Program guides are designed to help Lifelites Volunteers and champions to train and support hospice staff on the use of the magical Lifelites equipment in small bite-sized chunks.*

## Introduction to the New Mobile Magic Carpet



### 1. Introduction – checking previous knowledge

Begin the session by checking if your trainees have used a magic carpet before and if they have used IPad or an iPhone before.

### 2. Explain the benefits

- The Mobile Magic Carpet is a much more compact and versatile portable version and is very easy to use
- It has many applications that encourage user interaction and teaches cause and effect in fun and intuitive ways.
- It can be controlled by the keyboard it comes with or an IPad or Smart Phone
- It can be projected onto the floor, table, and bed, through thin sheets, even on to water allowing users to engage with games and images and making it accessible for all abilities.
- It is customisable so that games and applications can be made personalised to the individual perhaps showing their family, favourite place, bedroom at home, the possibilities are endless or perhaps to a theme the setting is currently engaged with.
- It is portable and can be transported to alternative locations for use.

### 3. Basic operation – key board

- Basic Magic Carpet operation requires the PC being turned on from the button on the right hand side of the white box, the projector should start automatically. If it doesn't press the projector power button on the front of the machine
- Depending on software version access all application through either the menu icon or categories icon. Select that application for use
- To return to the menu then for keyboard users clicking 'Esc'
- Volume controls are on the left hand side of the white box.
- Height controls are on the back of the white box at the top. Up – image bigger, Down – image smaller




#### 4. Play some games and apps

Choose 3 or 4 applications using the keyboard to show your trainee - Scatter, Image wipe, Catch, Spray

If available use a proper torch to show that this will react within the applications

#### 5. Basic operation - iPad and Smart phone

- Follow above for turning on the Magic carpet device
- Connect the iPad and smart phone to the magic carpet Wi-Fi network. Go to the setting section of your iPad or smart phone device and click on the Magic Carpet network and type in the password - magic carpet.
- Open the magic carpet app on your iPad. The first time you use the app you will be asked to enter setup to set a server IP. Click on the cog icon in the bottom left corner of the screen and enter the following IP address in the box and hit save: **192.168.0.200**.

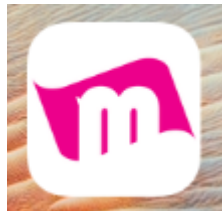

- Depending on software version you can access all applications through either the menu icon or categories icon. Select that application for use and click run - the application will run on the magic carpet but not on the iPad. You can continue to search for other applications on the iPad whilst the magic carpet runs the current application.
- To change applications just select the desired application. The benefit of iPad and smart phone control is that there is no delay between application selections allowing users seamless transition between applications.

#### 6. Play some games and apps

Choose 3 or 4 applications using the iPad/Smart Phone to show your trainee - Scatter, Image wipe, Catch, Spray

#### 7. Customising Applications

- To customise applications click on the builder icon (a pencil). In this window you can view already customised applications or build new ones.
- Choose a template to customise and go into that template. On this screen there will be options of what to customise. Images can be used that are on the iPad/smart phone, you can take a image using the take photo/video option or you can upload images/videos from an alternative source into the Magic carpets PC using the USB port on the right hand side of the white box. You can also upload audio clips.



- Customise the parts that you wish. If you do not customise all possibilities the device will use default settings so the application will still work.
- Save and name your application
- Your application will now appear as a selection choice

### 8. Build and Play some customised applications

Ask your trainees to take turns to customise an application – use different templates to illustrate the differing options available

